
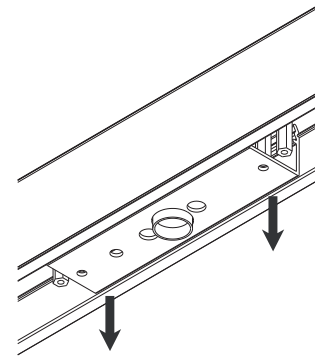


name 2UR LEDSYSTEM DALI + SAFETY SCREWS

- ① Remove ALL safety screws with special bit.
First pull out polycarbonate cover
by hand or suction cap (incl.)

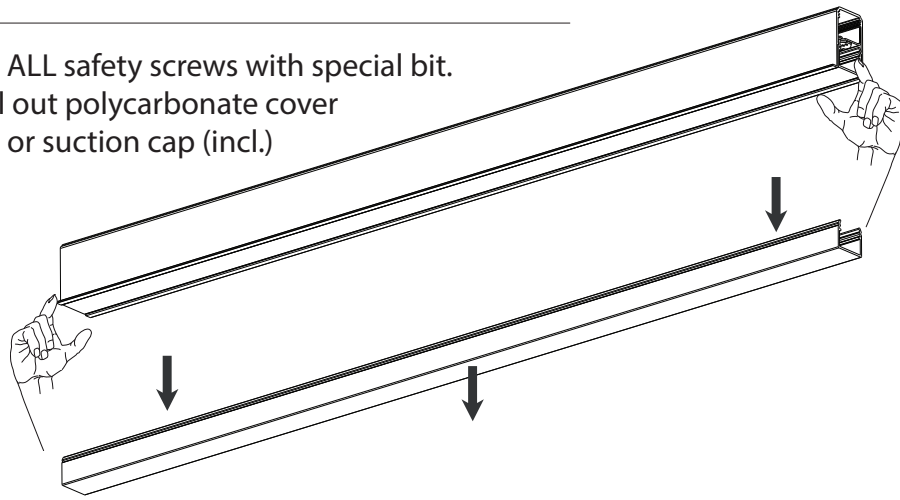


Second : pull out alu cover with sensor.
ATTENTION :
**BE VERY CAREFULL WITH STATUSLED
FROM EMERGENCY MODULE.**

Disconnect all cables :


- statusled (wago orange)
- sensor (on sensor)
- 4 connectors for through wiring
 - 3 x Adels white
 - 1 x Adels black

INSTALLATIE- EN ONDERHOUDSRICHTLIJNEN m.b.t. FABRIEKSGARANTIE.
1. DE VERBINDINGEN EN HET UITTESTEN VAN DEZE TOESTELLEN DIENEN ALTUJD TE GEBEUREN DOOR EEN ERKEND ELECTRO-INSTALLATEUR.
2. DEZE VERLICHTINGSTOESTELLEN MOETEN GEïNSTALLEERD, VERBONDEN EN GETEST WORDEN VOLGENS DE NATIONAAL GELDENDE REGLEMENTEN OP DE ELECTRIISCHE INSTALLATIES (BELGIE?, A.R.E.I., DUITSLAND; DIN VDE 0100 TEIL 559 A2, ...; DEZE OPSOMMING IS LOUWER INFORMATIEF)
3. DE TECHNISCHE BIJSLUITER MOET GEZIEN WORDEN ALS ONDERDEEL VAN DE ALGEMENE VERKOOPVOORWAARDEN VAN TAL N.V.
4. DE ELECTRO-INSTALLATEUR IS VERANTWOORDELIJK VOOR HET GEBRUIKEN VAN VOORSCHAKELAPPARATUUR DIE VOLDOET AAN DE GELDENDE CE EN EMC NORMEN.
5. VERVANG DE LAMP (-EN) ALTUJD MET DE GROOTSTE ZORG, ZE IS (ZIJN) UITERST BREEKBAAR.
6. OPGEPAST: PLAATS NOOIT DE LAMP MET BLOTE HANDEN, GEBRUIK ALTUJD EEN DOEK !


- ② Look for BLACK screws in profile.




- ③ Remove all screws and plastic washers
to release led module

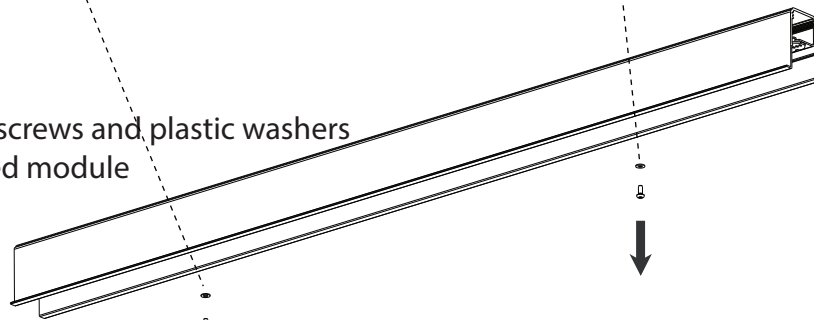


- ④ Gently pull out led module

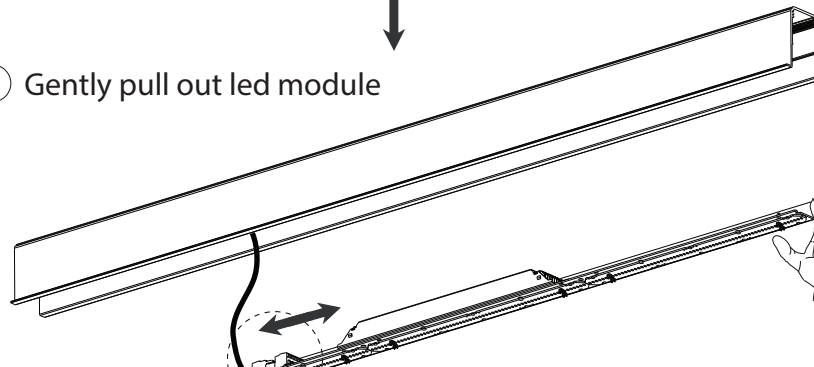

- ⑤ Disconnect module cable.

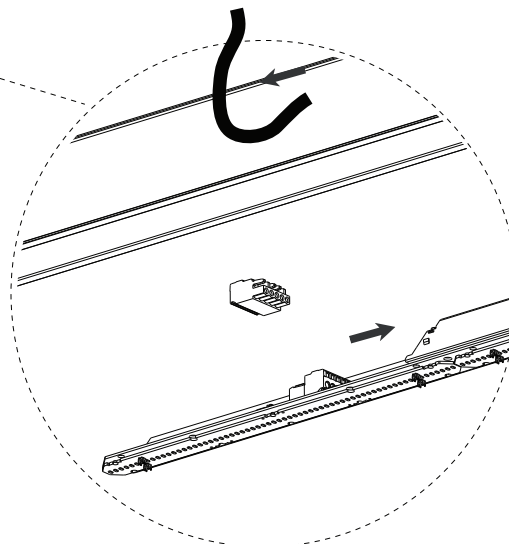

- ⑥ Drill power supply holes DIA10mm in 2U R profile


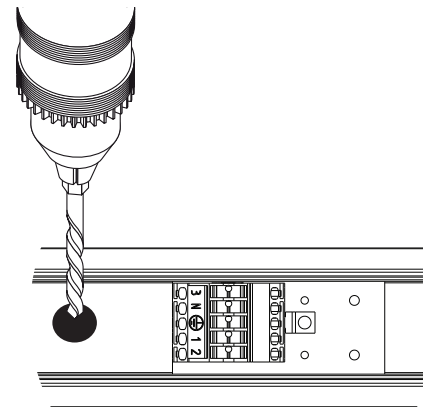


Connect power supply

N: NEUTRAL (blue) | 230V AC
1: LINE (brown) | 50Hz
2: DALI
3: DALI
Earthing (green/yellow)

With emergency module :
There is no extra unswitched cable !
This is a DALI profile, all drivers are
contantly connected with power supply.

- ⑦ Mount empty profile into ceiling

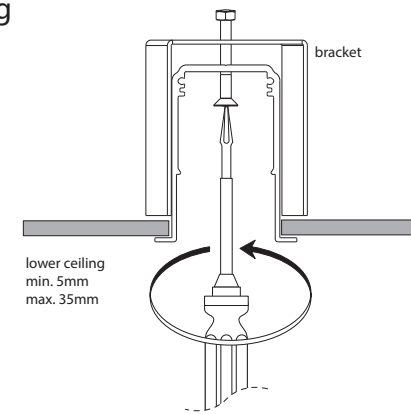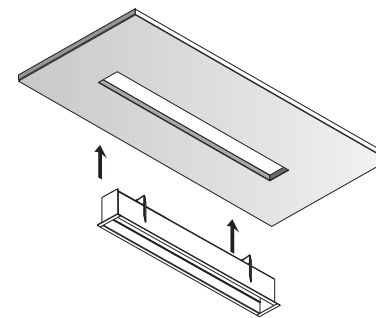

- ⑧ - Connect the led modules and put them back in the profile.
- Connect all wiring in the middle of the profile
 - statusled with Wago connectors (orange)
 - sensor directly on the device
 - through wiring :



- 3 x white Adels : connect same colored wires
 - white with white / black with black / red with red
- 1 x black Adels



- Put back alu cover
- Put back safety screws

Now it is safe to put on power supply